

Ce document vous est fourni par SUPRATEC Syneo, partenaire exclusif de DELO en France.

www.supratec-syneo.com



Technical Information

DELO[®]-ML DB140

Anaerobic- and light curing adhesive

<u>Base</u>

- Modified urethane acrylate
- one-component, solvent-free
- dual-curing adhesive

<u>Use</u>

- bonding: metals, small surfaces and with a high fitting accuracy
- fixing: coaxial components, e.g., bearings or sockets
- adhesive leaking from the bonding gap can be cured in seconds with visible light
- therefore, firmness to touch can be reached faster
- easy application control due to fluorescent color
- if one of the components to be bonded is translucent, non-metals can also be bonded through polymerization
- DELO curing lamps generating radiation adjusted to the adhesives are available to initiate this reaction
- suitable for small casting applications, if cured with DELO curing lamps. The top, open adhesive surface exposed to air remains tacky
- also suitable for the bonding of components with dissimilar coefficients of expansion due to flexibilized and tension-equalizing nature
- the cured product is normally used in a temperature range of -60 °C to +180 °C; depending on the application, other limits may be more reasonable
- successfully tested according to UL 94 HB
- compliant with RoHS directive 2015/863/EU
- -

Processing

- the surfaces to be bonded must be dry as well as free of dust, grease and other contaminations
- DELOTHEN cleaners are recommended for the optimal preparation of bonding areas
- thread connections must be tightened well
- the adhesive is good to dispense from original containers or by means of dispensing systems suitable for anaerobic-curing adhesives

Curing

- anaerobic, i.e., by exclusion of air and under metal influence at room temperature with small gap
- the curing may be assisted by application of heat, use of activator and/or light, e.g. if the curing speed is too slow or if it comes to larger gaps
- the build-up of strength depends on the components and the geometry joined. The initial strength is achieved after just a few minutes. Significant acceleration is possible by using an activator and/or applying heat
- curing with UV light in a wavelength range of 320 450 nm. DELOLUX LED curing lamps are especially suitable as per the chart below. All standard DELOLUX HID discharge lamps are also suitable
- when using light fixation, an intensity at the adhesive of 700 mW/cm² should not be exceeded. Application related, higher intensities can be useful
- both curing mechanisms can be used in combination or separately

Lamp type	DELOLUX 20 / 50 / 80		
Wavelength [nm]	365	400	460
Suitability	++	++	-

- not suitable + suitable ++ especially suitable

Properties


- fluorescent variant of DELO-ML DB135
- low-viscous setting
- light-curing and anaerobic-curing
- high strength, difficult to remove
- very good strengths and low roughness depth of the bonding areas

Technical data


Color	yellowish transparent, fluorescent
prefered clearance [mm]	0,05-0,1
clearance with heat or activator [mm]	up to 0,3-0,4
clearance with light curing [mm]	4
Density [g/cm ³] at room temperature (approx. 23 °C)	1.09
Viscosity [mPas] at 23 °C, rheometer, PP20, gap 200 μm, shear rate 10 1/s	950
Curing time until initial strength [min] at room temperature (approx. 23 °C), anaerobic on zinc-phosphated screws	approx. 1 - 3

curing progress

compression shear strength shaft-hub joint based on initial value at room temperature measured at room temperature (approx. 23 °C) according to ISO 10123

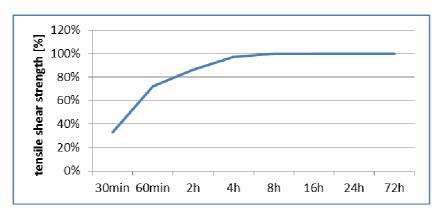

compression shear strength shaft-hub joint with activator DELO-QUICK 5006 based on initial value at room temperature measured at room temperature (approx. 23 ℃) according to ISO 10123

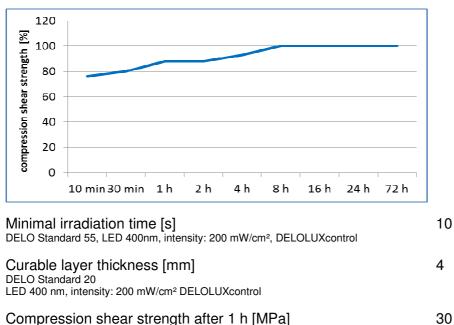

Compression shear strength [MPa] according to ISO 10123 Compression shear strength glass/glass [MPa] DELO Standard 5 LED 400 nm, intensity: 200 mW/cm² DELOLUXcontrol, irradiation time: 60 s Tensile shear strength AI/AI [MPa] DIN EN 1465

40

30

6


13

Tensile shear strength St/St [MPa] DIN EN 1465


Tensile strength [MPa] according to DIN EN ISO 527	30
Elongation at tear [%] according to DIN EN ISO 527	30
Young's modulus [MPa] according to DIN EN ISO 527	900
Shore hardness D according to DIN EN ISO 868	74
Glass transition temperature [°C] DMTA, tensile measurement, at room temperature (approx. 23 °C) 2nd measurement run rheometer	120
Coefficient of linear expansion [ppm/K] DELO Standard 26 TMA in a temperature range of +35 ℃ to +70 ℃	110
Coefficient of linear expansion [ppm/K] DELO Standard 26 TMA in a temperature range of +100 ℃ to +160 ℃	179
Shrinkage [vol. %] DELO Standard 13	8.7
Water absorption [%]	0.8

Performance under temperature influence


compression/shear strength shaft -hub joint after temperature storage based on initial value at room temperature measured at room temperature (approx. 23 °C) according to ISO 10123

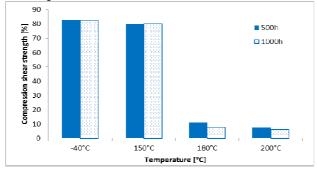

tensile strength after temperature storage based on initial value at room temperature measured at room temperature (approx. 23 °C) according to DIN EN ISO 527

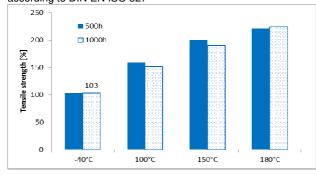

elongation at tear after temperature storage based on initial value at room temperature measured at room temperature (approx. 23 °C) according to DIN EN ISO 527

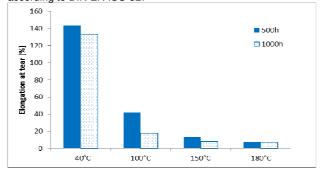


Storage life at 0 °C to +10 °C in unopened original container


Storage life at room temperature (max. 25 °C) in unopened original container up to 600 ml

DELO-ML DB140 - 02.19 (Revision 10)

compression/shear strength shaft-hub joint at temperature based on initial value at room temperature measured at determined temperature according to ISO 10123

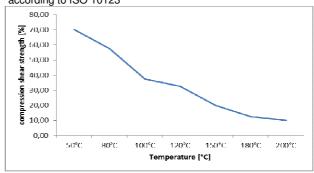

Young's modulus after temperature storage based on initial value at room temperature measured at room temperature (approx. 23 °C) according to DIN EN ISO 527

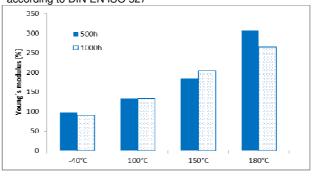

6 months

3 months

Instructions and advice

General

The data and information provided are based on tests performed under laboratory conditions. Reliable information about the behavior of the product under practical conditions and its suitability for a specific purpose cannot be concluded from this. It is the customer's responsibility to test the suitability of a product for the intended purpose by considering all specific requirements and by applying standards the customer deems suitable (e. g. DIN 2304-1). Type, physical and chemical properties of the materials to be processed with the product, as well as all actual influences occurring during transport, storage, processing and use, may cause deviations in the behavior of the product compared to its behavior under laboratory conditions. All data provided are typical average values or uniquely determined parameters measured under laboratory conditions. The data and information provided are therefore no guarantee for specific product properties or the suitability of the product for a specific purpose.

Nothing contained herein shall be construed to indicate the non-existence of any relevant patents or to constitute a permission, encouragement or recommendation to practice any development covered by any patents, without permission of the owner of this patent.

All products provided by DELO are subject to DELO's General Terms of Business. Verbal ancillary agreements are deemed not to exist. This product is still a development product and therefore subject to modifications.

Instructions for use

The instructions for use of DELO-ML are available on: www.DELO.de. We will be pleased to send them to you on demand.

Occupational health and safety

see material safety data sheet